1000i IPKTS Wi-Fi Setting Guide

Version	Date	DESCRIPTION OF CHANGES
1.0	2021/05/21	Initial Release
1.1	2022/11/02	Added "Phone Entering Text " Added "How to enter the Wi-Fi Settings Menu"
1.2	2025/02/28	Changed company name.



Contents

- Introduction
- Wi-Fi dongle supported in 1040i/1050i
- LCD Menu
 - Soft Buttons and Wi-Fi Status Icon
 - Phone Entering Text
 - How to set up Wi-Fi
 - How to enter the "Wi-Fi Settings" Menu
 - Turn-on Wi-Fi and Scan AP
 - Connect to the scanned AP
 - Connect to a saved AP
 - Connect by editing the saved AP
 - Connect by manually adding AP
 - After connecting AP, set up the network and exit the menu
 - Disconnect the connected AP
 - Delete the connected AP
 - Delete the saved AP
 - Turn-off Wi-Fi
- Web Menu
 - Turn-on Wi-Fi
 - Scan AP
 - Connect an AP
 - Delete the AP



Introduction

The 1040i and 1050i are equipped with USB ports, and you can use a Wi-Fi dongle to access your wireless network (AP). This guide provides the LCD and web menus required for Wi-Fi settings. In the LCD menu, you can set up a wireless network with only a connectable AP. First, connect the Wi-Fi dongle to the USB port located on the back of the terminal.

Note: When connecting to a Wi-Fi dongle, support Wi-Fi settings menu in the Phone Network Settings(11. Wi-Fi settings).

- Supported Terminal models and S/W versions
 - -. 1040i and 1050i (Version Rls.1.2.0 or later, Rls.3.0.0 or later)
- Compatibility Wi-Fi Dongle Lists
 - -. TP-LINK Archer T3U (AC1300 Mini Wireless MU-MIMO USB Adapter, Ver:1.0)
 - -. TP-LINK Archer T4U (AC1300 Wireless Dual Band USB Adapter, Ver:3.0)
 - -. D-Link DWA-182 (Wireless AC1300 MU-MIMO Wi-Fi USB Adapter, Revision D)
 - -. TP-LINK Archer T3U PLUS V1 (Supported on Terminal S/W Version Rls.3.0.0 or later)
 - -. TP-LINK Archer T3U NANO V1(Supported on Terminal S/W Version Rls.3.0.0 or later)

Note

- -. IPECS cannot guarantee other model except the above list and this list will be updated if we have finished testing the new one anytime.
- -. The Wi-Fi and Bluetooth dongle cannot be used together, only one must be connected to the USB port.
- -. Wireless, which uses a dongle, only supports IPv4 address.
- -. To operate reliably against radio interference, we recommend using 5 GHz.
- -. If the Wi-Fi wireless connection does not work during boot, re-register with the AP.
- -. The TP-LINK Archer T3U PLUS dongle does not support phone stand position adjustment and wall mount installation.



Wi-Fi dongle supported in 1040i/1050i

 TP-LINK Archer T3U AC1300 Mini Wireless MU-MIMO USB Adapter, Ver:1.0





 TP-LINK Archer T4U AC1300 Wireless Dual Band USB Adapter, Ver:3.0





D-Link DWA-182
 Wireless AC1300 MU-MIMO Wi-Fi USB Adapter, Revision D





LCD Menu




Soft Buttons and Wi-Fi Status Icon

[LCD]

The button functions used in the Wi-Fi setup menu

Buttons	Functions
BACK	Return to the previous menu.
ON	Turn on the Wi-Fi
OFF	Turn off the Wi-Fi
CONNECT	Attempt to connect to the selected AP.
EDIT	Change the information of the selected AP and connect.
DISCONNECT	Disconnect from the connected AP, but data is retained.
DELETE	Disconnect from the connected AP and erase all data.
SEARCH	Search for AP again.
2.4G	Re-search only 2.4G APs
5G	Re-search only 5G APs
2.4G / 5G	Re-search for both 2.4G and 5G APs
ADD	Add AP manually.
∢ or ▶	Means there is an additional Soft menu, use the Left/Right navigation buttons.
NAVI or VOL Up/Down	It is used to move to the desired AP on the AP list screen.
TRANS button	It is used as a soft key MODE in the input screen.

Wi-Fi Status Icon

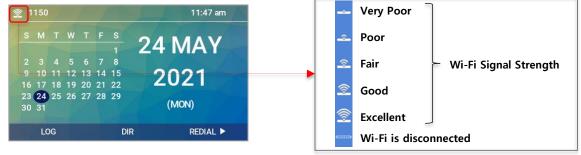




Phone Entering Text

[LCD]

• Input mode and character deletion

To change the input mode, use the MODE on the soft menu or the TRANS button.

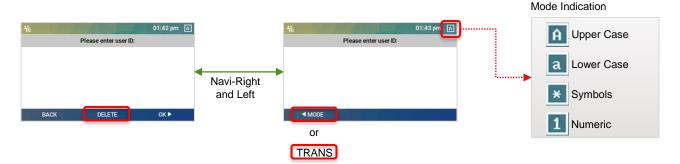

To delete a character, use the DELETE on the soft menu or the DND button.

● 1000i series phone's Character Entry Chart

(D1: Press once, D2: Press twice, D3: Press three times, D4: Press four times)

	Entry Mode												
	Upper Case				Lower Case			Symbols				Numeric	
	Button Depressions												
Dial Pad Digit	D1	D2	D3	D4	D1	D2	D3	D4	D1	D2	D3	D4	D1
1	@	:	/		@	:	/		@	:	/		1
2	Α	В	С		а	b	С			\$	%		2
3	D	E	F		d	е	f		^	&	_		3
4	G	Н	ı		g	h	i		()	?		4
5	J	K	L		j	k	ı		-	+	/		5
6	М	N	0		m	n	0		<	>	=		6
7	Р	Q	R	S	р	q	r	s	;	:			7
8	Т	U	٧		t	u	v		•	"	`		8
9	w	Х	Υ	Z	w	х	у	z	{	}			9
0		,	?	!		,	?	!		,	?	!	0
*		*				*	:	:		*			*
#	Space(' ')				Space(' ')			#	[]		#	

Example:

'A': Select Mode as Upper Case and press Dial 2 once.

'b': Select Mode as Lower Case and press Dial 2 twice.



How to set up Wi-Fi

[LCD]

The Wi-Fi setting menu is only displayed when the Wi-Fi dongle is installed, so you must first plug the dongle into the USB port on the back of the phone.

Procedure for setup:


- Step 0. Connect Wi-Fi USB dongle
- Step 1. Turn-on Wi-Fi
- Step 2. Search & Connect AP
- Step 3. Configure Network
- Step 4. Reboot the phone



How to enter the "Wi-Fi Settings" Menu


[LCD]

Enter the "Network Settings" Menu

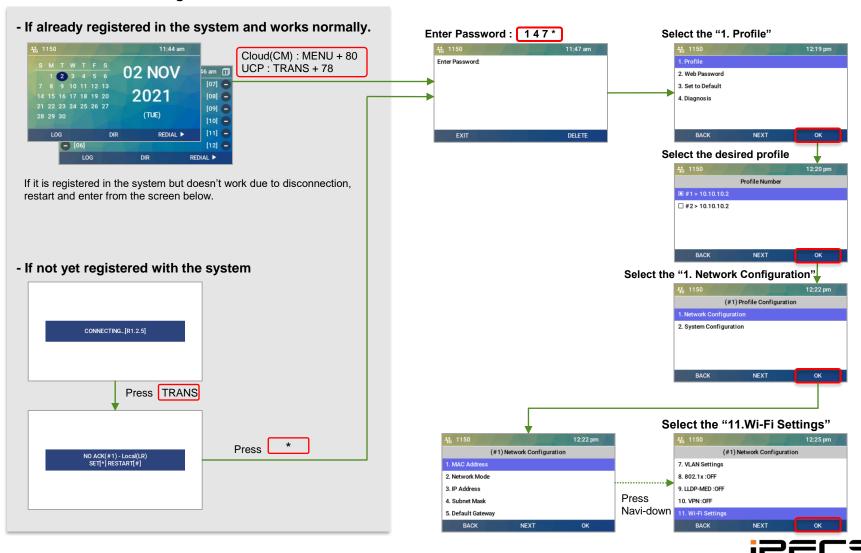


Turn-on Wi-Fi and Scan AP

1. Select "11. Wi-Fi Settings" from the Network Settings – Profile – Network Configuration

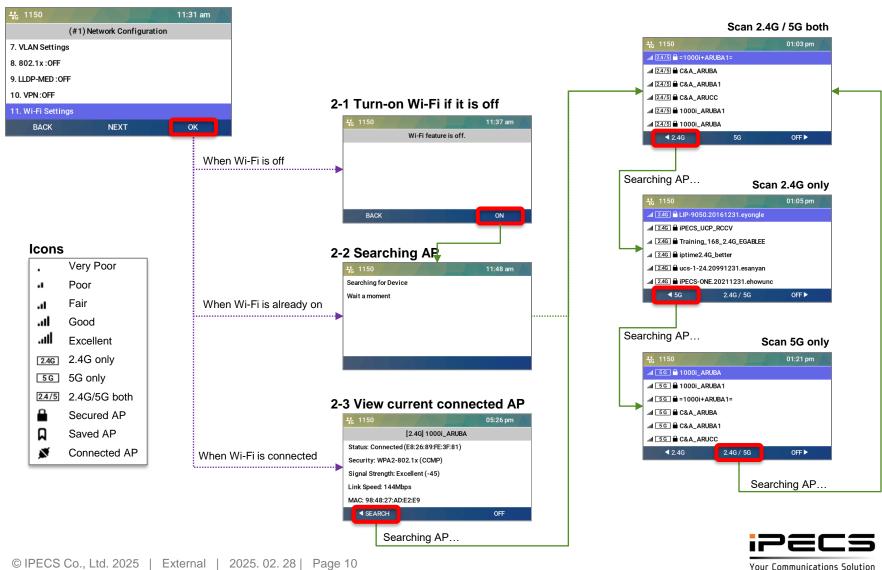

Connect to the scanned AP




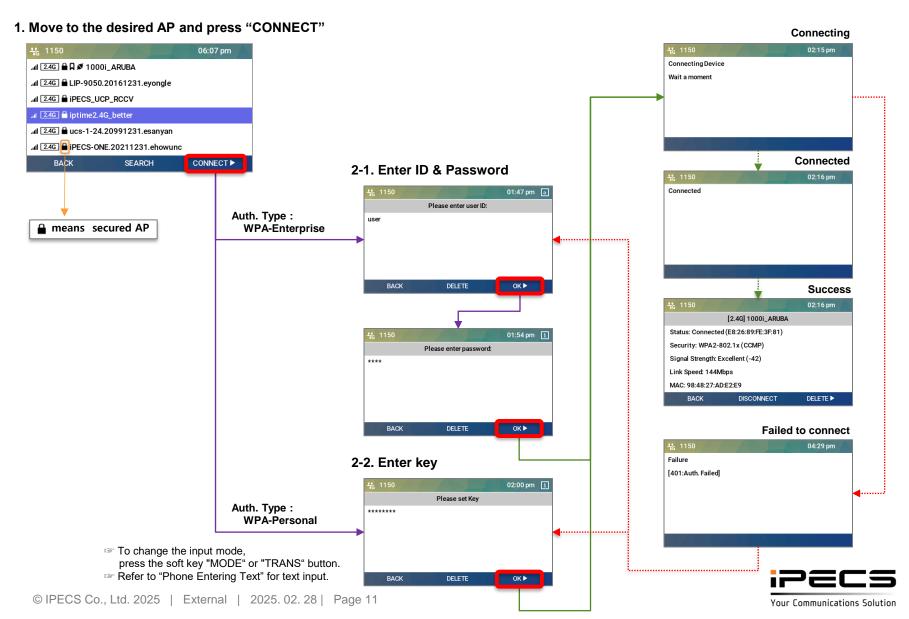

Connect to a saved AP

[LCD]


1. Move to the desired saved AP and press "CONNECT"

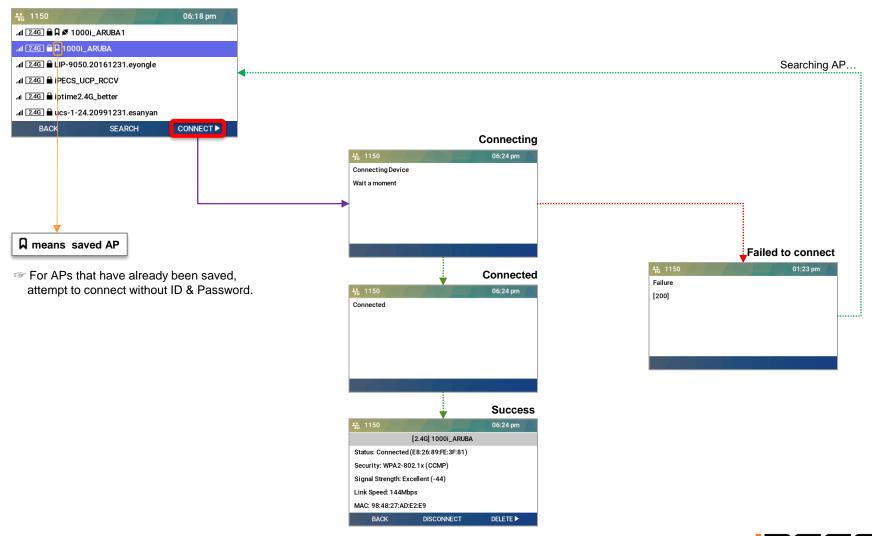

Connect by editing the saved AP




Your Communications Solution

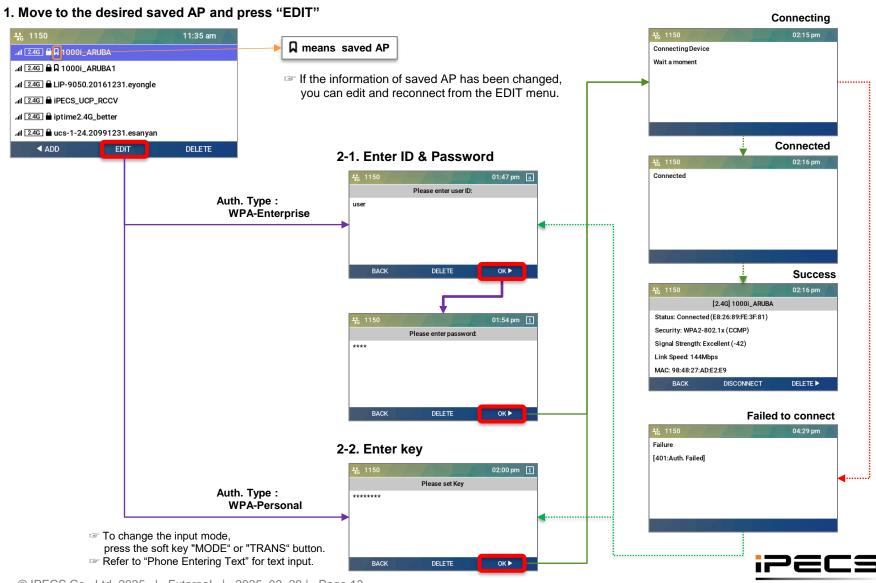

Connect by manually adding AP

[LCD]


1. Press "ADD" on the AP list screen

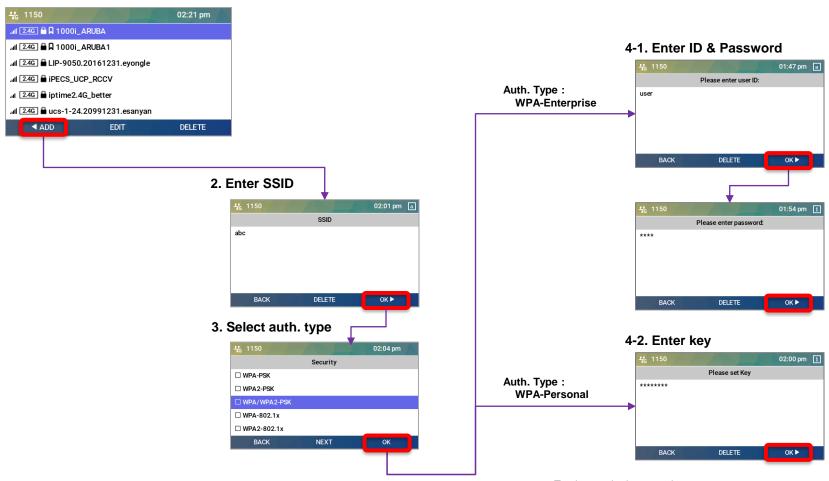

- To change the input mode, press the soft key "MODE" or "TRANS" button.
- Refer to "Phone Entering Text" for text input.



After connecting AP, set up the network and exit the menu[LCD]

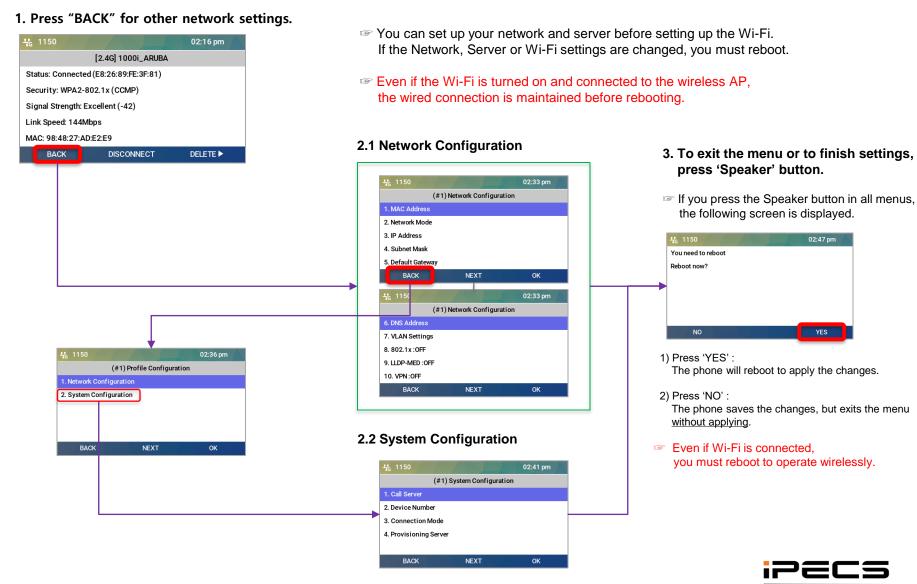


Your Communications Solution

Disconnect the connected AP

[LCD]


1. Press "DISCONNECT" in the connected AP Information.

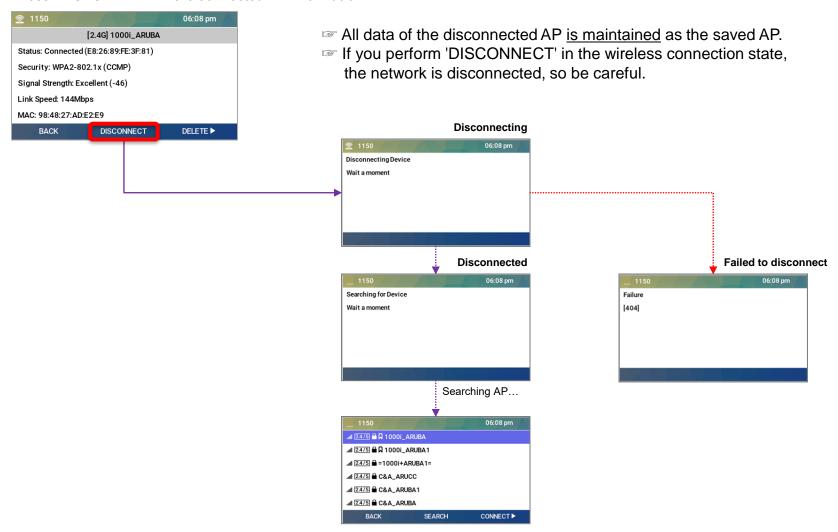

Delete the connected AP

[LCD]


1. Press "DELETE"

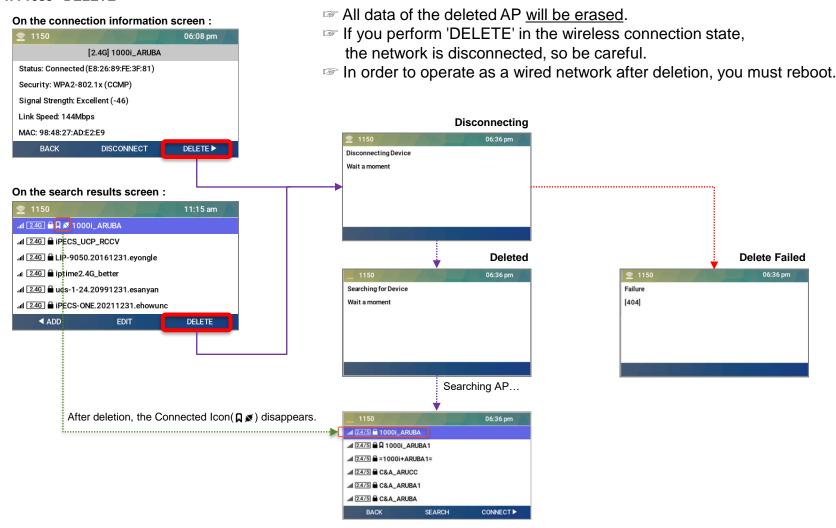

Delete the saved AP

[LCD]

1. Move to the desired AP and press "DELETE".

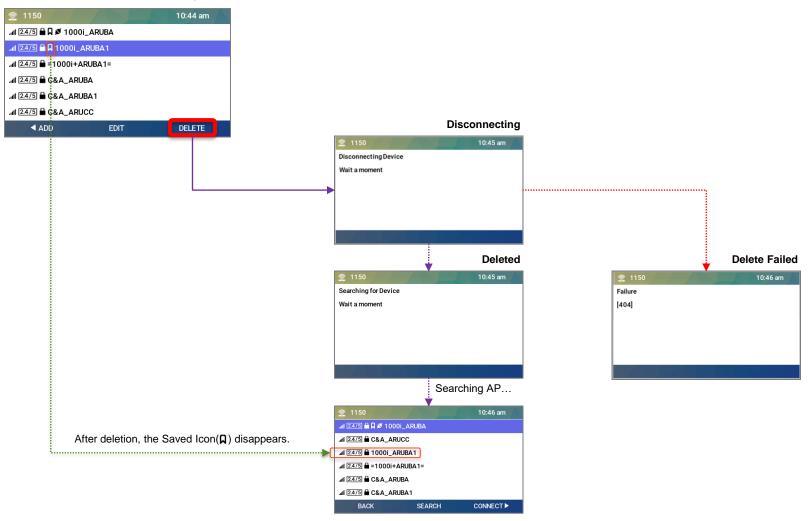





Turn-off Wi-Fi

[LCD]

 1. Press "OFF"



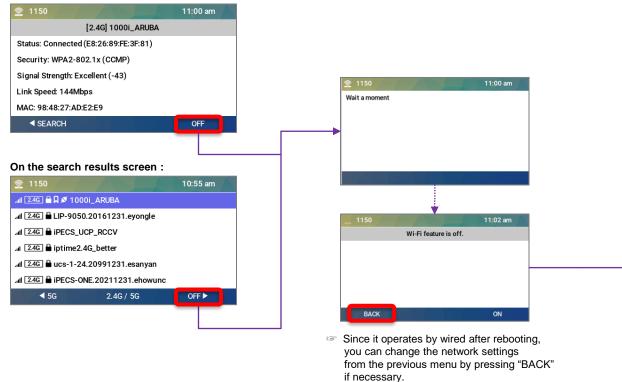

2. To exit the menu or to finish settings, press 'Speaker' button.

If you press the Speaker button in all menus, the following screen is displayed.



- 1) Press 'YES':
 The phone will reboot to apply the changes.
- 2) Press 'NO':
 The phone saves the changes, but exits the menu without applying.
- Even if the wired network is connected after wireless off, the wired does not work before rebooting.



Web menu




Turn-on Wi-Fi

[WEB]

To turn on the Wi-Fi,


connect to the web manager and select "Wireless" as the Interface in the Network menu of the Network configuration. If you select "Wireless", a menu for searching and setting wireless APs is displayed as shown below, and if you select "Wired", this menu disappears.

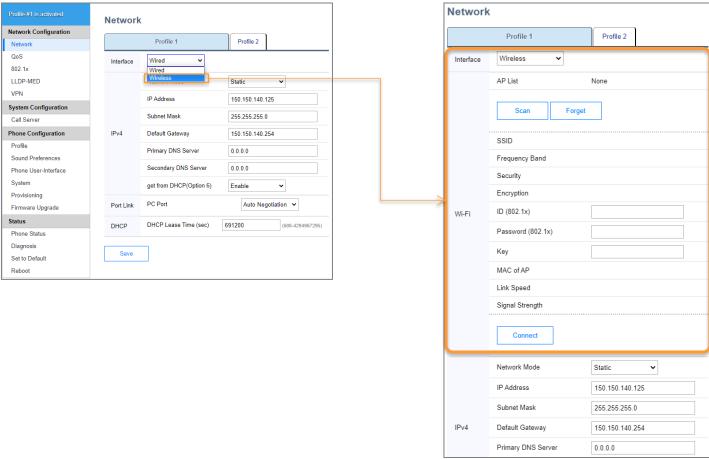

Scan AP



Click "Scan" to search for connectable APs, and after completion, you can check the list in the AP List.

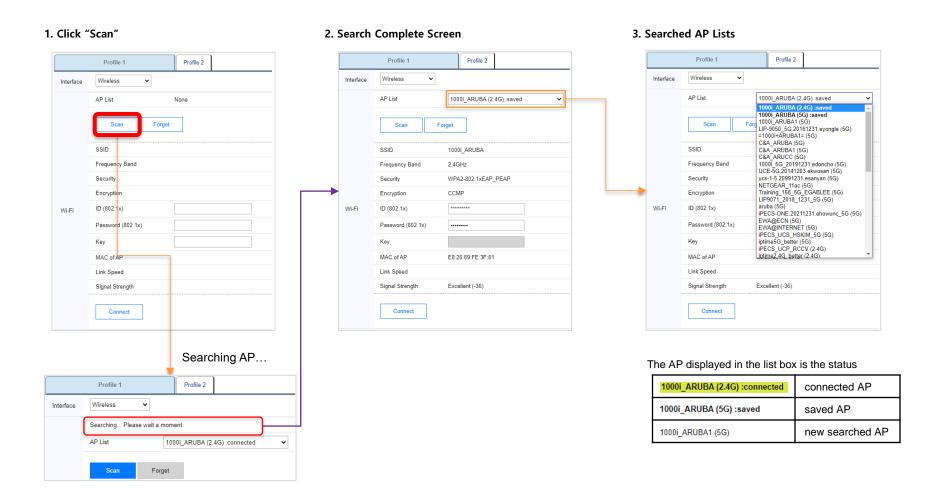


Connect to AP



If you select the AP you want to connect to from the searched AP list, the authentication screen appears as shown below.

- Connecting to a saved AP

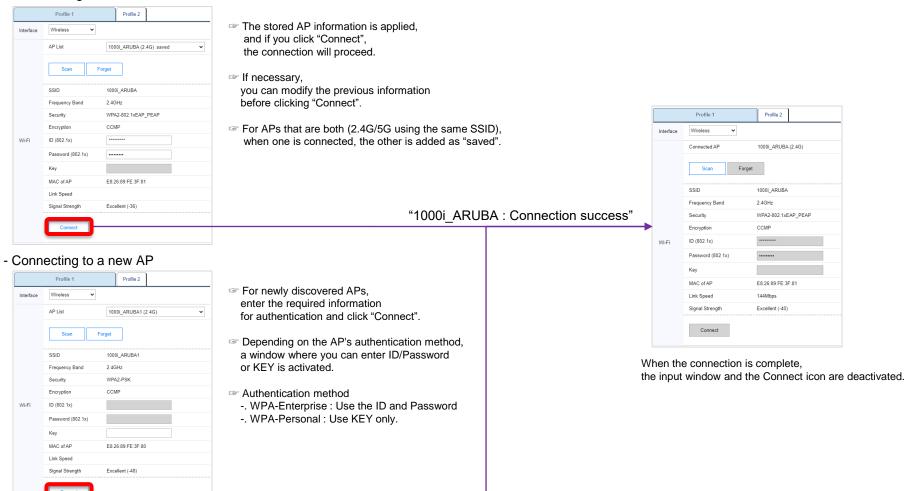


After connecting AP, set up the network and exit

[WEB]

Your Communications Solution

After connecting the AP, press "Save" after completing the network setup, and a reboot confirmation window will appear.

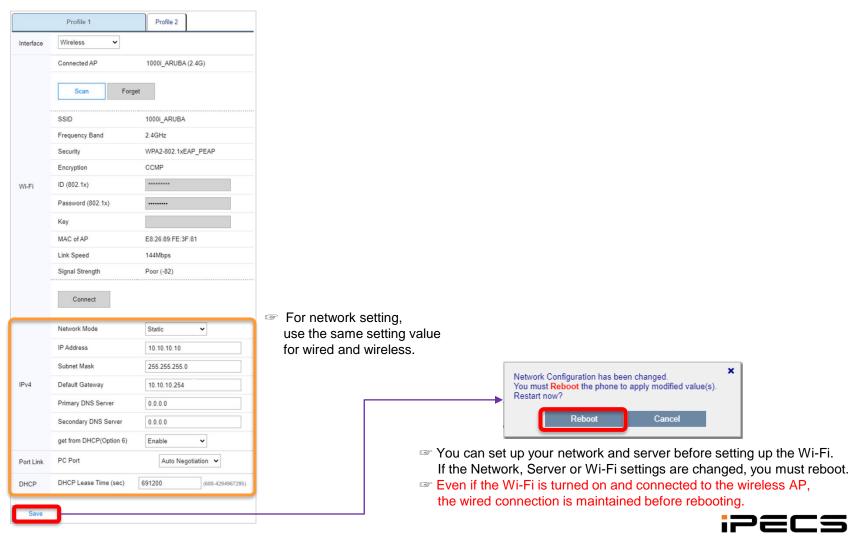

You can delete the "saved" AP by selecting it from the AP List.

1. Select the AP you want to delete from the AP list and click "Forget".

